



1 : FM3 (87 – 108 MHz)
2 : FM17 (64 – 108 MHz)
3 : AM1 (520 – 1710 kHz)
4 : AM2 (522 – 1620 kHz)
5 : SW2 (N 3.2 – 3.4 MHz) (W 3.2 – 7.6 MHz)
6 : SW3 (N 3.9 – 4.0 MHz) (W 3.2 – 10.0 MHz)
7 : SW9 (N 9.2 – 10.0 MHz) (W 5.9 – 18.0 MHz)
8 : SW10 (N 11.45 – 12.25 MHz) (W 7.0 – 16.0 MHz)
9 : SW11 (N 11.6 – 12.2 MHz) (W 7.0 – 23.0 MHz)
10: SW13 (N 13.57 – 13.87 MHz) (W 9.0 – 22.0 MHz)
11: SW14 (N 15.0 – 15.9 MHz) (W 9.5 – 18.0 MHz)
12: SW16 (N 17.48 – 17.9 MHz) (W 10.0 – 22.0 MHz)
Note: N = SW Narrow-band, W = SW Wideband

