




■ Accessories

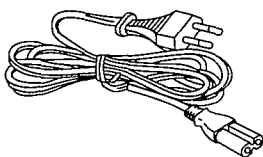


- AC power supply cord
for (E) (EG) (GC) areas (RJA0019-2K) ... 1 pc.

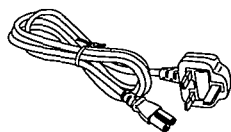


- for (EB) area (VJA0733) 1 pc.

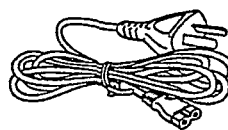

- for (GN) area (RJA0036-K) ... 1 pc.

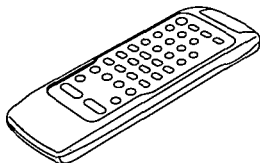


 - Remote control transmitter
(RAK-CH115WH) 1 pc.




- Remote control batteries
(UM-4, AAA, R03) 2 pcs.

 Note: These are available on sale route.



 
- Flat cable
Long (REX0511) 1 pc.
Short (REX0512) 1 pc.




- Antenna holder
for (E) (EB) (EG) (GN) areas (SMA233-1M) 1 pc.



 - LW/MW loop antenna
for (E) (EB) (EG) (GN) areas (SPB1163T) 1 pc.
for (GC) area (RSA0010) 1 pc.




- for (GC) area (RMN0244) 1 pc.

 

- FM indoor antenna
for (E) (EB) (EG) areas (RSA0007) 1 pc.
for (GC) (GN) areas (RSA0006) 1 pc.



- Mounting screws
for (E) (EB) (EG) (GN) areas (XTN3+10AFZ) 2 pcs.
for (GC) area (XTN3+12AFZ) 1 pc.

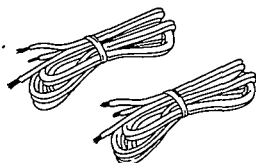

- Speaker cords
(REE0499) 2 pcs.



- Attachment plug
for (EB) area (SJP9009) 1 pc.



- Power plug adaptor
for (GC) area (SJP5213-2) 1 pc.


Note:

The configurations of AC power supply cord and FM indoor antenna differ according to area.


■ Stacking the Components

Install the various components as shown below.

Horizontal stacking

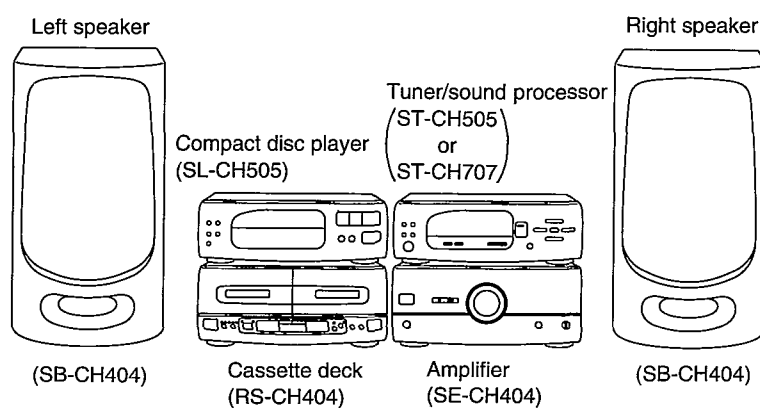


Vertical stacking

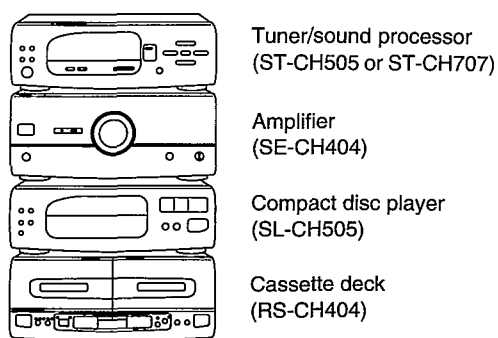

System layout example


- ① Left speaker
- ② This system
- ③ Right speaker
- ④ Surround speakers

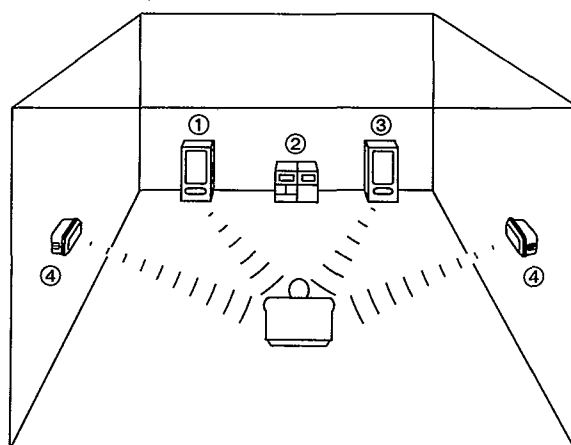

To produce a better stereo sound, install both speakers away from the system.

Surround sound effect differs according to where you install the surround speakers. Install them as you like.


■ Connections

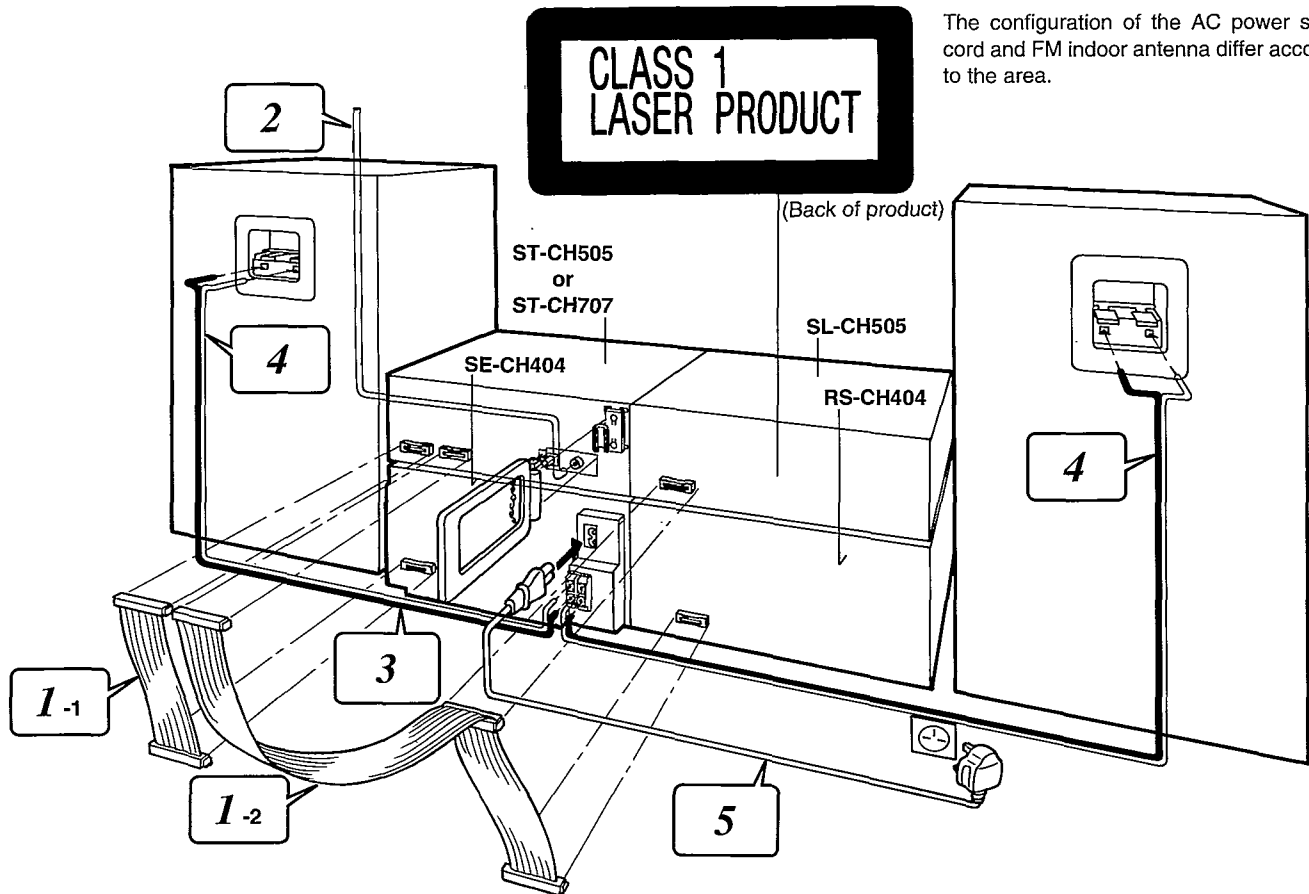


The configuration of the AC power supply cord and FM indoor antenna differ according to the area.

1 Connect the flat cable.

Connecting

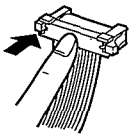

Disconnecting

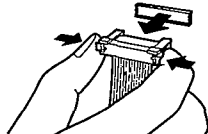


1. Connect the shorter flat cable to the terminal of the tuner/sound processor and amplifier.
2. Connect the longer flat cable to the terminal of the tuner/sound processor, compact disc player, and cassette deck.

Route the cable horizontally (underneath the heat outlet grille) so that the side with the white-coloured lead is positioned at the front.

Be sure to connect the blue-coloured connector to B1 (tuner/sound processor).


After connection, fold and press the cable as flat to the back of the unit as possible.

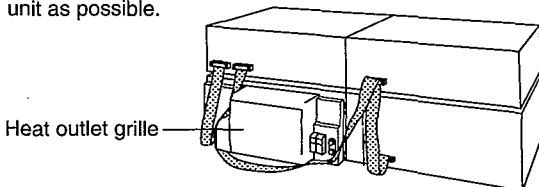

Do not try connecting or disconnecting the flat cable while the power is switched to ON.

2 Connect the FM indoor antenna.

Install the antenna on a wall at a height and in a direction which result in the best reception.

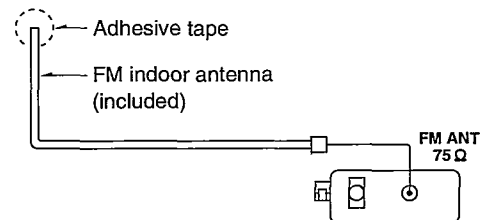

The tip of the internal antenna wire should not come into contact with any metal objects.

When you cannot get a good reception with this FM indoor antenna, we recommend you install an FM outdoor antenna. (Not included. See page 8.)

For areas except United Kingdom

